

DPF-30

Digital Photo Frame Owner's Manual



Vivitar®

© 2009 Vivitar, Inc. All rights reserved.
All other trademarks are the property of their respective companies.

Table of Contents

Package Contents	3
Computer System Requirements for Windows.....	4
A Quick Look at Your Device	5
Preparing Your Device for Use	6
Starting Your Digital Photo Frame	7
Exploring the Settings Options	8
Loading Photos from Your Computer	15
Using Photo Viewer Software	17
Digital Photo Frame Maintenance	19
Appendix A: Technical Specifications	20

Introduction:

Thank you for purchasing the Digital Photo Frame. Please read this manual carefully FIRST in order to get the most out of your device.

Package Contents:

- Photo Frame
- USB cable
- User's Manual with Warranty Information

Computer System Requirements for Windows

Your Digital Photo Frame can be used with computers running Windows XP and Windows Vista. In order to load photos from your PC to your Digital Photo Frame you will need the following minimum system configuration:

Windows XP Users

- Pentium 4 Processor or higher (recommended), 1.6 GHZ, .Windows XP Service Pack 2
- 512MB RAM
- 150MB Free Hard Disk Drive Space
- CD/DVD ROM Drive
- Available USB Port
- Direct X 9 Capable Graphics Card
- 1024x768 Screen Resolution

Windows Vista Users

- One Gigabyte (GHz) processor
- 512MB RAM
- 150MB Free Hard Disk Drive Space
- CD/DVD ROM Drive
- Available USB Port
- Direct X 9 Capable Graphics Card
- 1024x768 Screen Resolution

A Quick Look at Your Device



Button Functions

Up Button: Pushing the UP Button allows you to scroll UP or backwards.

Down Button: Pushing the DOWN Button allows you to scroll DOWN or forward

Menu Button/ Power Button: By quickly pushing this button you will enter the selected setting. By pressing the button down for 3 or 4 seconds you can power on or power off your device.

Reset Button: Press the reset button in order to reset your device. This can be used if your device is not powering off properly.

USB Port: Connect the included USB cable to this port in order to connect your device to your computer so it can be charged, or so that you can load new photos.

Preparing Your Device for Use

To charge the battery of your Digital Photo Frame

Your device has a built in lithium battery. A red battery icon  will flicker on the LCD screen when your Digital Photo Frame battery is running low. After 10 seconds, your Photo Frame will automatically turn off. You can recharge your lithium battery by connecting your photo frame to the computer with the included USB cable.

Starting Your Digital Photo Frame

Powering on Your Photo Frame:

Press and hold the **Menu Button/Power Button** for about 3 seconds to power on your Digital Photo Frame.

Note:

Please make sure that your Photo Frame has sufficient battery power in order to operate properly.

Powering Off Your Photo Frame


When your Photo Frame is turned on, press and hold the **Menu Button/Power Button** for about 3 seconds. On your LCD screen the message “Power Off” will appear, and your Digital Photo Frame will power off.

Viewing Different Photos On Your Photo Frame

If multiple photos are loaded on your Photo Frame, you can press the  or  button to scroll through the different photos on your LCD screen.

Exploring the Settings Options

To change or adjust any of the settings options for your Photo Frame, first power on your Photo Frame, and then press the **Menu** button. On your LCD screen, you will see the heading “Main Menu”, followed by a list of settings that can be adjusted on your Photo Frame. Use the  or  button to scroll through the list of settings options. When the setting you wish to adjust is highlighted, press the **Menu** button to make adjustments. Your Photo Frame features the following settings which can be adjusted:

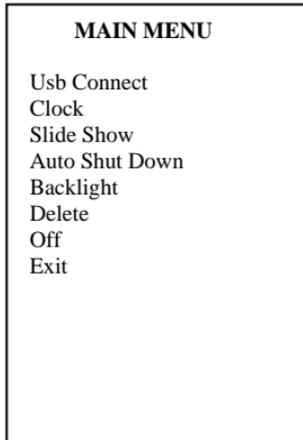

1. USB CONNECT

- A. Press the **Menu** button to enter the settings menu.
- B. Once in the settings menu, press  or  repeatedly until USB CONNECT is highlighted.
- C. Press the **Menu** button to enter this setting.
- D. Navigate  or  to select between YES and NO.
- E. Press **Menu** to confirm.

USB CONNECT SETTINGS

Yes: When YES is selected, you can load pictures from your computer onto your Digital Photo Frame once your device is connected to your computer using the included USB cable.

NO : When NO is selected, you will be unable to load photos onto your Digital Photo Frame, as your computer will not look for the device when it is plugged in.

NOTE: The USB CONNECT option must be set to YES in order to load photos from your computer.

2. CLOCK

- A. Press the **Menu** button to enter the settings menu.
- B. Once in the settings menu, press  or  repeatedly until CLOCK is highlighted.

C. Press the **Menu** button to enter this setting.

D. Press  or  to select the DISPLAY CLOCK, ANALOG CLOCK, SET CLOCK or ALARM CLOCK.

E. Press the **Menu** to confirm.

DISPLAY CLOCK

By choosing the DISPLAY CLOCK option, your frame will display the date, time and day of the week

ANALOG CLOCK

The ANALOG CLOCK allows the time to be displayed as an analog clock image on the screen.

SET CLOCK

The SET CLOCK allows you to adjust the Display Clock so that it displays accurate time and date information. To do so, press  or  to choose the correct date or time setting, and press the **Menu** to confirm these settings.

ALARM CLOCK

ON: When ON is selected, the alarm can be set by pressing  or  to enter the time that you'd like your alarm to go on and then the **Menu** button to confirm.

OFF: When OFF is selected, any alarm that has been set will be turned off.

CANCEL: When CANCEL is selected, no alarm will be set or turned off, and you'll come to the main menu of the Frame.

3. SLIDE SHOW

A. Press the **Menu** button to enter the settings menu.

B. Press  or  repeatedly until SLIDE SHOW is highlighted.

C. Press the **Menu** button to enter this setting.

D. Navigate  or  to select ON, OFF or CANCEL.

E. Press the **Menu** to confirm.

SLIDE SHOW SETTINGS

The SLIDE SHOW SETTINGS allow you to choose the number of seconds that each of your photos will be displayed. You can choose anywhere between 1-15 seconds. Press the  or  button repeatedly to toggle through the amount of seconds you'd like to select, and press the **Menu** button to enter the setting.

NOTE: By selecting 0 seconds, you will turn the slide show off. Your Photo Frame will only display one photo without periodically switching to others.

4. AUTO SHUT DOWN

- A. Press the **Menu** button to enter the settings menu.
- B. Press the  or  button repeatedly until AUTO SHUT DOWN is highlighted.
- C. Press the **Menu** button to confirm.

AUTO OFF SETTINGS

The AUTO OFF SETTINGS allow you to choose the number of minutes until your Photo Frame automatically shuts off in order to save battery power. You can choose anywhere between 1-30 minutes. Press the  or  button repeatedly to toggle through the amount of minutes you'd like to select, and press the **Menu** button to enter the setting.

NOTE: By selecting 0 seconds, your Photo Frame will not automatically turn off automatically. To turn it off, you will have to manually turn off your Photo Frame.

5. DELETE

- A. Press the **Menu** button to enter the settings menu.
- B. Press the  or  button repeatedly until DELETE is highlighted.
- C. Press the **Menu** button to confirm.

DELETE ONE SETTING

YES: The current displaying photo in your Photo Frame will be deleted.

NO: The current displaying photo will not be deleted.

CANCEL: No photo will be deleted, and you will go back to the main menu.

NOTE: You can use the  or  buttons to highlight YES, NO or Cancel. You can press the **Menu** to enter this setting.

DELETE ALL SETTING

YES: All photos in your Photo Frame will be deleted.

NO: All photos will not be deleted.

CANCEL: When CANCEL is selected, all the photos will not be deleted, and you will go back to the main menu.

NOTE: You can use the  or  buttons to highlight YES, NO or Cancel. You can press the **Menu** to enter this setting.

6. OFF

- A. Press the **Menu** button to enter the settings menu.
- B. Navigate the  or  button repeatedly until OFF is highlighted.
- C. Press the **Menu** button to confirm.

OFF SETTING

When OFF is selected, the Photo Frame will be power off.

7.BACKLIGHT

- A. Press the **Menu** button once to enter the settings menu.
- B. Press the  or  button repeatedly until **BACKLIGHT** is highlighted.
- C. Press the **Menu** button to enter this setting.
- D. Press the  or  button to make adjustments to the **BACKLIGHT** setting when applicable.

8. EXIT

- A. Press the **Menu** button once to enter the settings menu.
- B. Press the  or  button repeatedly until EXIT is highlighted.
- C. Press the **Menu** button to confirm.

EXIT SETTING

When EXIT is selected, your LCD screen will go back to showing stored photos.

Loading Photos from Your Computer onto Your Digital Photo Frame

In order to load photos from your computer, simply connect your Photo Frame to your computer by inserting one end of the included USB connection cable to the USB port on your Photo Frame, and the other end to an available USB port on your computer. Make sure that you have the USB Connect setting on your Photo Frame selected. To do so, follow the steps below:

USB CONNECT

- A. Press the **Menu** button once so that the Main Menu appears on your Photo Frame.
- B. Press the  or  button repeatedly until USB CONNECT is highlighted.
- C. Press the **Menu** button to confirm

USB CONNECT SETTINGS

YES: When YES is selected, you can connect your Photo Frame to your computer in order to load photos on to your Photo Frame.

NO: When NO is selected, your computer will not recognize your Photo Frame and you will not be able to load photos from your computer.


You can use the  or  buttons to highlight YES or NO. You can press the **Menu** to enter this setting.

NOTE: The USB CONNECT option must be set to YES in order to load photos from your computer onto your photo frame.

When your Photo Frame is connected to your computer, and the USB CONNECT option is properly set, the LCD Screen of your Photo Frame will display “USB CONNECT”.

Using Photo Viewer Software

Once your Photo Frame is connected to your computer, **Photo Viewer** software will automatically start. No additional software disks are needed.

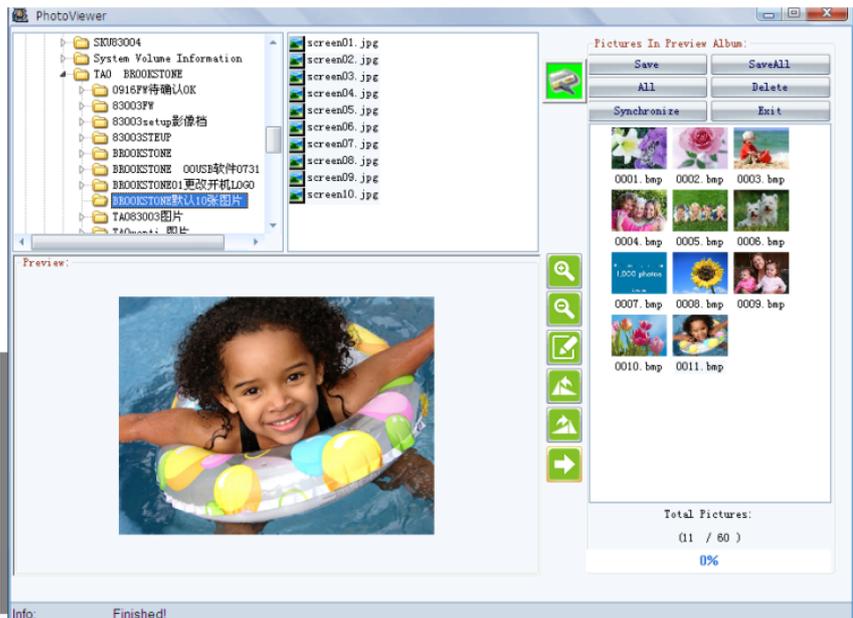

1. In the upper left hand corner of the screen, there is a directory of files and folders on your computer. Find the picture file you would like to load onto your Photo Frame and left click on it with your mouse.

2. You can adjust the appearance of the photo you have selected by clicking on the + (expand), - (contract), RotateL (rotate left), RotateR (rotate right) or RECT buttons. The RECT button automatically resizes your photo so it will fit in your Photo Frame.

3. Click on the ADD button to add the photo to the right hand column. All photos listed on the right hand column can be added to your Photo Frame by clicking on the DOWNLOAD button.

In the upper right hand corner of the screen you also have options to SAVE (this saves a selected photo from your Photo Frame to your computer), SAVEALL (this saves all photos on your Photo Frame to your computer), EXIT (this exits the **Photo Viewer** program), ALL (this highlights all the photos on your Photo Frame), and DELETE (this deletes any unwanted photos from your Photo Frame).

4. The setting button allows you to change the text color and background color seen on the LCD screen of your Photo Frame.

NOTE: Do not unplug your Photo Frame while photos are being transferred.

TROUBLESHOOTING TIP:

If your photo frame software does not automatically run when your device is plugged in and set to the USB Connect setting please do the following:

In Windows, go to your START menu, and select MY COMPUTER if you are using Windows XP, or COMPUTER if you are using Windows Vista.

An extra drive letter will appear, labeled with the name of your photo frame's software. Double click this drive to run your software.

Digital Photo Frame Maintenance

Your Photo is a product of superior design and craftsmanship and should be treated with care.

Carefully read the following tips:

- To avoid possible damage, you should not put excessive pressure on the LCD display screen. Also do not drop, knock or shake it.
- Do not store in hot or cold areas. High or low temperatures can shorten the life of the electronic devices, and warp or melt certain plastics.
- If your Photo Frame needs to be cleaned, unplug it first. Wipe it with a slightly damp cloth. However, never use harsh chemicals, cleaning solvents, or strong detergents.

Note: Wipe the screen only with a soft dry cloth when the power is off.

- Keep it dry. Avoid exposing to precipitation, humidity and liquid as it may cause damage to your Photo Frame.
- If there is something wrong with your Photo Frame, take it to the nearest qualified service facility.
- Don't place your hands or fingers on the LCD panel. Don't put hard and sharp solids on the screen.

Appendix: Technical Specifications

Product Type: Portable Digital Photo Frame

Image Storage Capacity: 60 Photos

Image Format: BMP, JPG,

Display: 2.4 inch LCD screen

Power Supply: Internal Rechargeable Battery

PC interface: USB 1.1

Working Temperature: 0-40°C

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference , and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates. Uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions. May cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/ TV technician for help.

LIMITED 1-YEAR WARRANTY

Vivitar warrants this quality product to be free of defects in material and workmanship for a period of one year from the date of purchase. During the period, Vivitar will repair or replace the product at no charge for parts or labor.

TIME PERIOD OF THIS WARRANTY

The time period of this warranty starts from the date of the original purchase and expires on the first anniversary date of purchase.

WHAT IS NOT COVERED BY THIS WARRANTY

No express or implied warranty is made for any defects in this product which result from accident, abuse, misuse, failure to operate the product in accordance with relevant instructions, neglect, immersion in or exposure to chemicals or liquids, extremes of climate, fungus, excessive wear and tear/cosmetic damage and defects resulting from other extraneous causes such as unauthorised disassembly, repair or modification.

This warranty shall not extend to any incidental or consequential damages arising from the purchase, use or inability to use this product even if Vivitar has been advised of such damages. The laws of some countries and some States thereof do not allow the limitation of incidental or consequential damages, so the above limitation or exclusion may apply to you.

WHAT TO DO WHEN SERVICE IS NEEDED

STEP 1. Package the product and relevant accessories carefully, using ample padding materials and a sturdy mailing container to prevent damage in transit.

STEP 2. Include in package:

- a)** Evidence of date and place of original purchase (for example, a copy of your sales receipt).
- b)** Detailed description of your problem.
- c)** When possible, a sample evidencing the problem.

STEP 3. Return item (insured) to:

Vivitar Service Department
195 Carter Drive
Edison NJ 08817

When service is complete, the product will be returned to you prepaid. In the event the product is deemed to be not faulty or the defect is a result in wear and tear, Vivitar may levy a handling charge for the return of the product.

For further queries, please visit our website **www.vivitar.com**.

This warranty gives you specific legal rights. You may also have other rights which vary from country and State to State thereof.